

CHEAT SHEET: ZAXCOM DEVA



To change basic Deva settings:

- From the main menu, go to *deva setup*. This is where you can toggle between sample rates, change your metering scheme, change the amount of record tracks, restore the factory defaults, and set your pre-record time.

To route inputs on the Deva:

- Go to the main menu.
- Select *disk mix*.
- You will see the routing matrix. Across the top are numbers that represent your inputs, and down the right hand side you will see numbers that represent disk tracks. You can route any input to any disk track.
- There are a couple of touch buttons on the bottom of the screen that will allow you to toggle between analog and digital inputs, pre and post fader, and reversing phase.
- Touch the square on the matrix that you want to route to. Choose analog or digital, pre or post.

To monitor on the Deva:

- Go to the main menu.
- Select *headphones*.
- Select which track goes to which side on your headphones.

To set up timecode:

- From the main menu, go to *timecode*.
- Here you can toggle between frame rates, timecode run modes, and jamming.
- If you have timecode plugged into the deva, you will see it in the "reader timecode" section of the screen.
- If you press *jam tc*, the Deva will jam its clock to the incoming timecode.
- If you want to jam the Deva to the time of day, you can press *jam TOD*, and the Deva will jam to its internal clock.

If you are using the analog inputs:

- Go to the main menu.
- Select *input control*.
- You will see your 8 analog inputs represented as squares on the top part of the screen. When you touch one you are taken to a screen that allows you to switch between mic and line level, turn on 48v phantom power on or off, set your low cut filter, set up your delay, and adjust your input trim.

To mirror a DVD-RAM disk with the Deva's internal DVD-RAM drive:

- Go to the main menu.
- Select *my deva*.
- Make sure the mirror drive select is set to *int dvd*.
- Select *mirror drive 1*.
- Here you can select your bit depth, file type, which tracks to mirror, and how to format the DVD-RAM.
- **EVERY DVD-RAM DISK MUST BE FORMATTED BEFORE IT IS MIRRORING!**
- Once the DVD-RAM is formatted, and you have all your settings set to where you need them, you can turn mirror mode on.

To change folders:

- Go to the main menu.
- Select *my deva*.
- Select *int hdd*.
- The current folder you are in will be highlighted in white. To go to another folder, simply touch the folder you wish to go to, and it will change.

DEVA IV & V MINI CHEAT SHEET

(cut out and put in your wallet)

Select Partition To Record In:

- o [Menu] · [My Deva] · [Internal HD Drive] · [Current Folder]
- o Select the folder to use in left column

Setup Routing Matrix:

- o [Menu] · [Disk Mix]
- o Inputs = columns, Tracks = rows
- o Pre-Fader = White, Post-Fader = Black
- o Analog = A, Digital = D

Setup Recording Parameters:

- o [Menu] · [Deva Setup]

Setup Mic/Line Level/Trim Controls:

- o [Menu] · [Input Control]
- o [Adjust Trim]

Setup Mirror Mode:

- o Put 4.7 GB DVD-RAM Disc In Drive
- o [Menu] · [My Deva] · [Mirror Drive #1] · [Format Drive] - Select UDF or FAT32
- o Start Seg = 1, End Seg = 999
- o Mirror Mode - ON

Setup Time Code:

- o Press F4 or [Menu] · [Time Code]